



For Parts Call Tools Renewed (800) 247-3639 Fax (860) 665-9821

<u>INDEX</u>	<u>REF. NO.</u>	<u>NAME OF PART</u>	<u>INDEX</u>	<u>REF. NO.</u>	<u>NAME OF PART</u>
		HANDLE			FRONTHEAD
2	BM376	Handle Assembly Complete	15	522	Fronthead Bolt
54	BM375	Handle Complete	16	523	Fronthead Bolt Nut - New Style
3	9817	Handle Bare	17	1533	Fronthead Bolt Washer
4	9842	Throttle Valve Bushing	18	525	Fronthead Spring
5	9816	Handle Plug	14	BM378	Fronthead Bolt Assembly
6	529	Throttle Latch			
7	531	Fulcrum Pin	33	BM380	Fronthead Complete 1-1/4 Hex
8	532	Stop Pin	34	BM379	Fronthead 1-1/4 Hex
9	9889	Throttle Valve Inc. (1613 and 3034)	36	9819	Fronthead Bare
29	1613	T. Valve "O" Ring (Large)	35	9870	Fronthead Bushing 1-1/4 Hex
12	3034	T. Valve "O" Ring (Small)	38	541	Index Pin
10	9848	Oil Plug	39	542	Index Spring
11	9872	Lubricator Pin	37	539	Retainer
50	1590	Handle "O" Ring Seal			
13	533	Throttle Spring	33	BM382	Fronthead Complete 1-1/8 Hex
53	3021	Rubber Grip	34	BM381	Fronthead 1-1/8 Hex
		CYLINDER	36	9819	Fronthead Bare
	9820	Cylinder Inc. Plugs	35	9869	Fronthead Bushing 1-1/8 Hex
	502	Nylon Cyl. Plugs (2)	38	541	Index Pin
	9640	Nylon Cyl. Plugs (2)	39	542	Index Spring
19	BM331	Handle Bolt Assembly	37	539	Retainer
20	519	Handle Bolt	55	544	Retainer Nut
21	520	Handle Bolt Nut	56	486	Retainer Bolt
22	521	Handle Bolt Lock Washer			SPIKE DRIVER
26	BM377	Valve Assembly			(Not Shown)
30	9895	Valve			
28	9815	Valve Stem		6708	Spike Driver Dolly
27	9846	Valve Box		6707	Spike Driver Fronthead
32	517	Valve Spring		BM100	Muffler
31	9814	Valve Box Dowel			
25	9611	Piston			
44	BM329	Air Inlet Swivel Assembly (Inc. 1551, 9891 & 9888)			
45	9891	Air Swivel			
46	1551	Air Swivel "O" Rings			
47	9890	Air Swivel Nut			
51	9888	Snap Ring - Two Styles Flat - Old Round - New			
49	988	Washer			
48	675	Strainer			
52	1937	Strainer "O" Ring			
23	51	Tappet			
24	9940	Tappet Seat			

For Parts Call Tools Renewed (800) 247-3639 Fax (860) 665-9821